


## BF-24684 PROVENCE WRITING DESK

INV#05051

## ASSEMBLY INSTRUCTIONS

Made In China

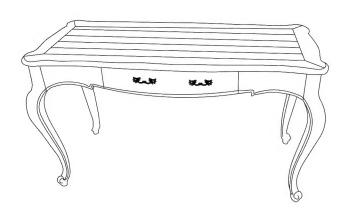


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.


IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST			
A	40	B	С
	TOP FRAME-1PC	LEGS-4PCS	ALLEN WRENCH-1PC
D	13mm× 1-3/4"	E	
	Dannan - Ann		
	SCREWS-8PCS	WASHERS-8PCS	

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

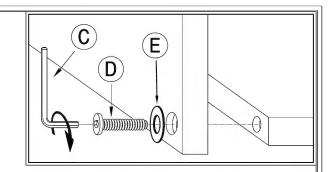

HOW TO USE THE ALLEN WRENCH

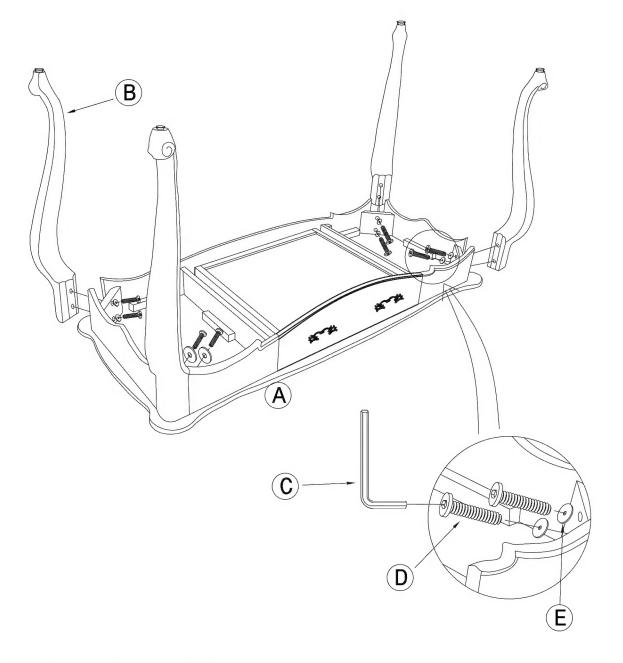

## 1). ASSEMBLE THE LEGS(B).

• ATTACH 4 LEGS(B) TO TOP FRAME(A) USING 8 SCREWS(D) AND 8 WASHERS(E).